Quick guide for the installation for

For more information about BioTime, refer to the Downloads section of our website.






Screw the base to a solid surface, such as a wall.




Insert the device into the base.



Screw the bottom of the device to the base.

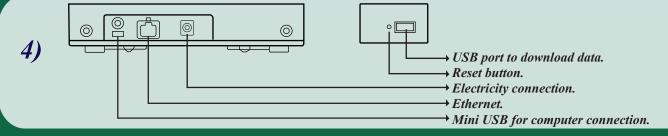

Proper way to place your finger on the fingerprint reader.




Place your finger flat against the surface of the sensor. Your finger should be on the center of the sensor.


Wrong ways to place your finger on the fingerprint reader.




Only the tip



Off-center



Sideways



Too far down